

WIPER AND WASHER SYSTEM

PARTS LOCATION

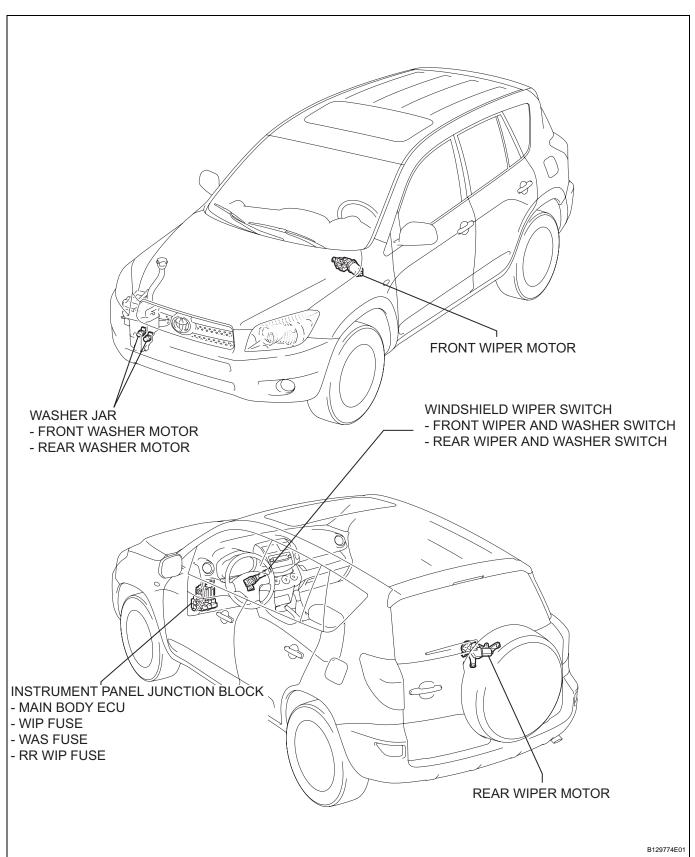




SYSTEM DIAGRAM

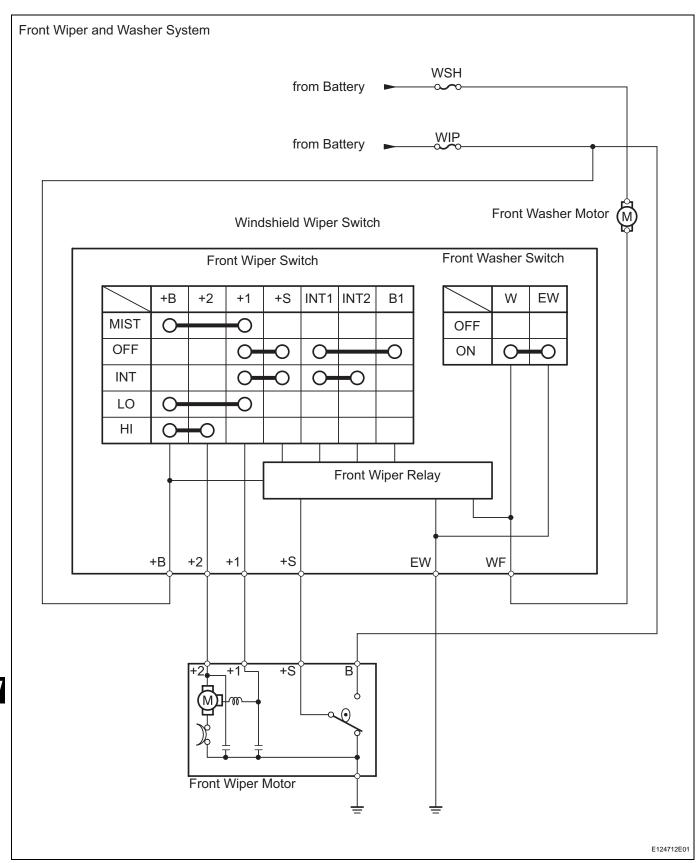



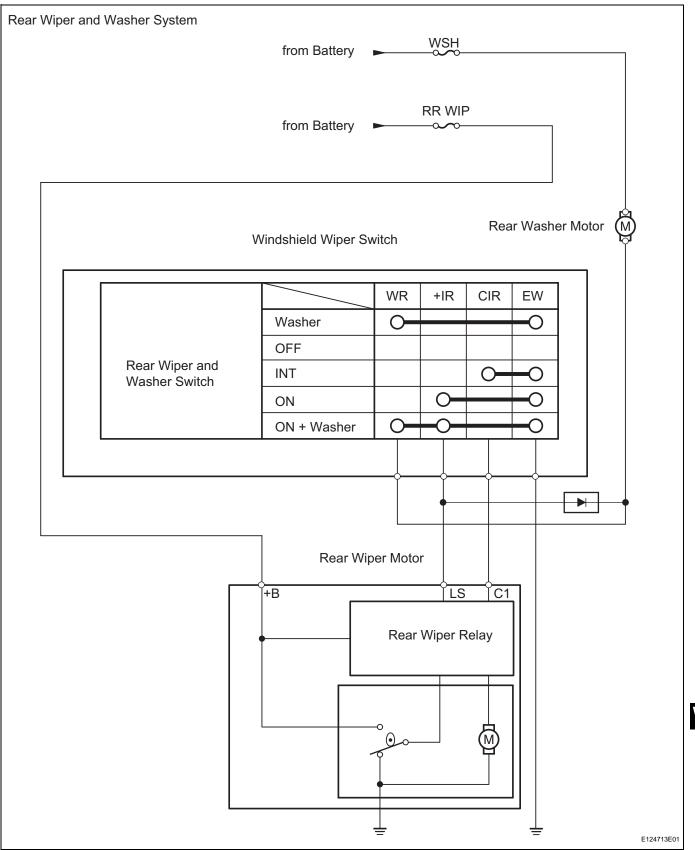

WW

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Wiper and washer system

Symptom	Suspected area	See page
Front wiper and washer system does not operate	Windshield wiper switch	WW-27
	2. Wire harness	-
Front wiper system does not operate in LO or HI	1. WIP fuse	WW-1
	2. Windshield wiper switch	WW-27
	3. Front wiper motor	WW-5
	4. Wire harness	-
Front wiper system does not operate in INT	1. WIP fuse	WW-1
	2. Windshield wiper switch	WW-27
	3. Front wiper motor	WW-5
	4. Wire harness	-
Front washer system does not operate	1. WSH fuse	WW-1
	2. Windshield wiper switch	WW-27
	3. Front washer motor	WW-33
	4. Wire harness	-
Front wiper arms do not return to their original positions when wiper switch is turned off	1. Front wiper motor	WW-5
	2. Wire harness	-
Rear wiper and washer system does not operate	Windshield wiper switch	WW-27
	2. Wire harness	-
Rear wiper system does not operate	1. RR WIP fuse	WW-1
	2. Windshield wiper switch	WW-27
	3. Rear wiper motor	WW-20
	4. Wire harness	-
Rear washer system does not operate	1. WSH fuse	WW-1
	2. Windshield wiper switch	WW-27
	3. Rear washer motor	WW-33
	4. Wire harness	-
Rear wiper arms do not return to their original positions when wiper switch is turned off	1. Rear wiper motor	WW-20
	2. Wire harness	-
	1	

